

alpsat®

DVB-S2 SATELLITE FINDER



EN USER GUIDE

Please read this manual carefully before using your Signal Meter.


TR KULLANIM KILAVUZU

Ürünü kullanmadan önce lütfen bu kılavuzu dikkatlice okuyunuz.



SATFINDER®
AS01-HD

OPERATING DIAGRAM

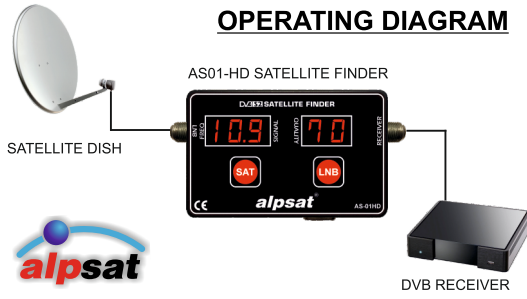

Default Lnb Types:

- 01: Universal Lnb
- 02: C Band Lnb
- 03: MDU 1 LNB
- 04: MDU 2 LNB
- 05: MDU 3 LNB
- 06: MDU 4 LNB
- 07: MDU 5 LNB
- 08: UNIVERSAL 2
- 09: DBS LNB
- 10: SINGLE 9750
- 11: SINGLE 10000
- 12: SINGLE 10250
- 13: SINGLE 10500
- 14: SINGLE 10600
- 15: SINGLE 10700
- 16: SINGLE 10750
- 17: SINGLE 11250
- 18: SINGLE 11300
- 19: C BAND 5760
- 20: C BAND 5950
- 21: UNIVERSAL3 CIR
- 22: C BAND LNB CIR
- 23: C BAND MDU
- 24: KA BAND 17250
- 25: KA BAND 18250
- 26: KA BAND 18750
- 27: KA BAND 19250
- 28: KA BAND 19750
- 29: KA BAND 21000
- 30: IF FREQ

How Can I Use ?

1. Connect from Lnb to SATFINDER and from SATFINDER to receiver.
2. Switch On the satellite receiver, the digital SATFINDER will turn on automatically.
3. The meter searches for one satellite at one TP. So you can change satellite with SAT button. You can see satellite list back side of the signal meter.
4. After choosing satellite you can also choose Lnb type with LNB button. Default Lnb types list right side of the user guide.
5. Fix your satellite dish to the proper azimuth and elevation directions.
6. Adjust the signal strength display max levels.
7. Remove the jumper cable and reconnect the LNB to your Receiver.

Warning: Operating voltage must be 13-18 Volt.

GARANTİ BELGESİ

İMALATÇI FIRMA VE SERVİS BİLGİLERİ

ÜN VANI: ALPSAT Elektronik San. Ve Tic. Ltd. Şti.
ADRESİ : Halil Rifat Paşa Mah. Perpa
Ticaret Merkezi A Blok K:8 No:1092 - 1093
Okmeydanı - Şişli / İSTANBUL
TELEFONU : +9 0212-222 85 50
FAKSI : +9 0212-222 85 52

MALİN


Cinsi	Yayın Test Cihazı
Markası	Satfinder AS01-HD
Modeli	AS01-HD
Bandrol ve Seri No	
Garanti Süresi	2 Yıl
Tamir Süresi	20 İş Günü

SATICI FİRMANIN

Ünvanı	
Adresi	

Tarih - İmza - Kaşe

KULLANIM DİYAGRAMI

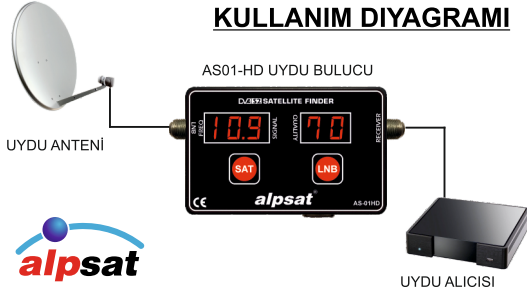

Lnb Tip Sıralaması:

- 01: Universal Lnb
- 02: C Band Lnb
- 03: MDU 1 LNB
- 04: MDU 2 LNB
- 05: MDU 3 LNB
- 06: MDU 4 LNB
- 07: MDU 5 LNB
- 08: UNIVERSAL 2
- 09: DBS LNB
- 10: SINGLE 9750
- 11: SINGLE 10000
- 12: SINGLE 10250
- 13: SINGLE 10500
- 14: SINGLE 10600
- 15: SINGLE 10700
- 16: SINGLE 10750
- 17: SINGLE 11250
- 18: SINGLE 11300
- 19: C BAND 5760
- 20: C BAND 5950
- 21: UNIVERSAL3 CIR
- 22: C BAND LNB CIR
- 23: C BAND MDU
- 24: KA BAND 17250
- 25: KA BAND 18250
- 26: KA BAND 18750
- 27: KA BAND 19250
- 28: KA BAND 19750
- 29: KA BAND 21000
- 30: IF FREQ

Nasıl Kullanırım ?

1. SATFINDER cihazını LNB ve Uydu alıcınıza ile bağlayınız.
2. Uydu alıcınızı bir kanalda açınız, SATFINDER cihazınız otomatik açılacaktır.
3. Uydu Bulucu gelen polarite gerilimine göre otomatik bir TP seçecektir. Daha sonra kendiniz ayarlamak istediğiniz uyduyu SAT butonu ile değiştirebilirsiniz. Uydu Listesi cihazın arkasındaki etikette verilmiştir.
4. Uydu seçimi yapıldıktan sonra LNB butonu ile Lnb tiplerini değiştirebilirsiniz. Lnb listesi sağ tarafta verilmiştir.
5. Çanak anteninizi azimuth ve elevation açılarına göre yönlendiriniz.
6. Çanak anteninizi en yüksek sinyal seviyesinde ayarlayınız.
7. Kabloları çıkartıp Uydu alıcınızı direk LNB ye bağlayınız.

Dikkat: Kullanım gerilimi 13-18 Volt arasında olmalıdır.